

User's Guide to HP Insight Management Agents for OpenVMS¹ Version 3.01

This guide contains the following sections:

- Section 1, Getting Started
- Section 2, Enabling Traps
- Section 3, Secure Sockets Layer (SSL)
- Section 4, Troubleshooting Tips
- Section 5, Appendix
- Section 6, Trademarks

1 Getting Started

Installation instructions are included on the web pages at the following URL:

http://h71000.www7.hp.com/openvms/products/mgmt_agents/

After you complete the installation, you can begin to use the Management Agents to monitor devices on your system.

Follow these numbered steps:

1. Enter a URL to view device data from a web browser:

`https://host:2381`

For host, substitute the name of a machine; for example:

`https://atst02.zko.dec.com:2381/`

The number 2381 following the URL is the port that the Management Agents use to communicate with the browser. If you do not specify this number, your browser might try to connect to another web page if the managed server is running a web server.

2. If you are using the default self-signed certificate, your browser will display a Security Alert message. If you get this alert, click on the **Yes** button to proceed. The Login page is the first screen displayed after the certificate is validated and a secure connection has been established with the server.
3. Before you can view the Device Home Page, you need to provide a valid user name and password. The login page contains the following information:

Item of Information	Description
<i>Login Account</i>	Enter your OpenVMS user name here. User accounts that have been assigned the WBEM\$ADMIN identifier get administrator privileges. All other accounts are treated as regular user accounts. Users with administrator privileges can change the default system options, set thresholds, and so on.
<i>Password²</i>	Enter your OpenVMS password.

After successful login, the Device Home Page is displayed. The Device Home Page contains the following information:

¹ Formerly Compaq Management Agents for OpenVMS.

² Please note that the secondary OpenVMS password is not validated.

Item of Information	Description
<i>Login Account</i>	Either “user” or “administrator” is displayed. If you click on this link, you are prompted to enter a User Name and Password. Enter your OpenVMS username and password to log in as a new user.
<i>Refresh...Options... Devices...Logout</i>	Click each choice displayed at the top left to do the following: Refresh Update the screen with the most recent information. Options Configuration Options: List general options such as Anonymous Access, Local Access Type, Auto Delete Users, Logging, IP Restricted Logins and Trust Mode. Trusted Certificates: Specify the certificates for management applications on trusted servers. Customer Generated Certificates: Extract a PKCS #10 certificate request and import a PKCS #7 generated certificate. Devices List Insight Manager 7 servers and HTTP Auto-Discovery devices. Logout Log out of the Device Home Page.
On the left are one or more product icons	Click the <i>Management Agents for OpenVMS</i> icon to display the initial (summary) view of the Management Agents for OpenVMS.
<i>Troubleshooting Tips</i>	At the bottom right, click to display system and browser requirements as well as troubleshooting questions and answers.

4. When you click the Management Agents for OpenVMS icon, a Summary page is displayed. On the left are the following choices:

- Configuration
- Mass Storage
- NIC
- Utilization
- Recovery

Note

The fact that a condition icon does not precede an option does not mean that the option contains no data, but rather, that the data displayed is static rather than dynamic in nature.

At any time, you can click the question mark next to a page heading to display more information and instructions for using the Management Agents for OpenVMS software. The help available for the Summary page includes browser requirements and a description of security measures.

In general, the pages accessible from the Summary page contain the following information:

- Configuration data, which includes:

Option	Description						
Software Version Info	Versions of the system software installed on this computer.						
System Info	Includes the following types of information: <table> <tr> <td>General information:</td><td>Type of computer, operating system, type of expansion bus, and so on.</td></tr> <tr> <td>Descriptive information:</td><td>Name of the computer, network up time, contact name and location, IP address, and so on.</td></tr> <tr> <td>Asset Control Information:</td><td>Serial Number comes from the console on AlphaServer systems. The Serial Number is blank if it is not set, except GS series AlphaServer systems, for which the system Serial Number is always filled in.</td></tr> </table>	General information:	Type of computer, operating system, type of expansion bus, and so on.	Descriptive information:	Name of the computer, network up time, contact name and location, IP address, and so on.	Asset Control Information:	Serial Number comes from the console on AlphaServer systems. The Serial Number is blank if it is not set, except GS series AlphaServer systems, for which the system Serial Number is always filled in.
General information:	Type of computer, operating system, type of expansion bus, and so on.						
Descriptive information:	Name of the computer, network up time, contact name and location, IP address, and so on.						
Asset Control Information:	Serial Number comes from the console on AlphaServer systems. The Serial Number is blank if it is not set, except GS series AlphaServer systems, for which the system Serial Number is always filled in.						
System Board	Includes general system board information such as ROM version, time in service, serial number and bus type; CPU information such as processors, coprocessors, system slots, actions, and cache; memory; diskette drives; and serial and parallel ports.						
System Resources	List of hardware resources in use on the computer, including names, buses, port/controller, and memory addresses for related data structures.						

Help for this page contains more detailed descriptions of the data displayed on the page.

- Mass storage data includes:

Option	Description
File System Space Used	Lists each volume with total size in megabytes, including space currently used and unused. The percentage of total space used is also shown. See Section 2, Enabling Traps, for instructions for setting thresholds for disk space usage.
Diskette Drives	Lists diskette drives, including device controller and capacity.
IDE Devices	Lists any IDE devices (such as a CD-ROM) installed on your system.
SCSI Controllers	Lists any SCSI controllers installed on your system.
Fiber Channel (FC) Controller	Lists any FC controllers installed on your system. Separate links are provided for each FC controller of a Fiber Channel. (The Adapter is connected to the system)

- Network Interface Card (NIC) data includes Ethernet Controller Information, Interface Information, and Interface Ethernet Statistics. Separate links are provided for each NIC known to your system.

Help for the NIC page includes detailed descriptions of the data displayed.

- Utilization data includes information about the system's CPU and Physical Memory utilization over time. Refer to Help for details.

- Recovery data is described in the following table:

Option	Description
Power-On Messages	Messages logged when the computer is turned on. Refer to the computer documentation for a listing of possible Power-On messages and their meanings.
Environment	Data from temperature sensors and fans is displayed.
Power Supply	Information displayed for each power supply includes its location, and status (OK, failed, degraded, or unknown).

2 Enabling SNMP Traps

SNMP Traps allow the Management Agents for OpenVMS to signal when a computer you are monitoring exceeds a threshold that you have set. Beginning with Version 2.2 of the Management Agents for OpenVMS, you can enable the setting and discovery of traps. Currently, the Management Agents for OpenVMS support traps for disk file space used, environmental parameters, CPU utilization, and Memory utilization.

You must enable SNMP SET operations to use the Drive Locate function provided within the Smart Array 5300A storage agent. See Section 2.2 for instructions on write-enabling the default community to enable SNMP SET operations.

You can enable traps on any of the following software versions:

- Compaq TCP/IP Services for OpenVMS Version 5.1 or later
- MultiNet TCP/IP for OpenVMS Version 4.3 or later
- TCPware TCP/IP for OpenVMS Version 5.5 or later

For more information about generating traps when using MultiNet or TCPware, refer to the MultiNet Installation & Administrator's Guide and the TCPware Management Guide.

This section contains the following subsections:

Section 2.1, Steps for Enabling Traps When Using TCP/IP

Section 2.2, Common Steps for Enabling Sets and Traps

Section 2.3, Steps for Changing the Default Community Name

Note

TCP/IP Version 5.1 ECO-1 or later must be running as you complete these steps.

2.1 Steps for Enabling Traps When Using TCP/IP

If you did not enable traps while installing TCP/IP, you can enable traps now by following these steps:

1. Enter the following command after the DCL prompt:

```
$ TCPIP SET CONFIGURATION SNMP/FLAG=SETS
```

This command allows you to set threshold values. In other words, the command lets the master agent process SET commands from SNMP clients.

2. Enter the following commands after the DCL prompt:

```
$ TCPIP SET CONFIGURATION SNMP/COMMUNITY="elmginkgo" -
_$ /TYPE=(WRITE)/ADDRESS=127.0.0.1
```

```
$ TCPIP SET CONFIGURATION SNMP/COMMUNITY="elmginkgo" -
_$ /TYPE=(WRITE)/ADDRESS=ip_address
```

where `ip_address` is the address where you want the trap message to be delivered; for example, 16.32.80.97.

3. You can send SNMP Version 2 traps by adding a line to the `TCPIP$VMS_SNMP_CONF.DAT` file for each Version 2 trap destination using the following format of the trap option:

```
trap v2c community ip-address[:port]
```

where, `community` specifies the community name, `ip-address` specifies the ip-address of host that is listening for traps and port specifies the port number. The default port number is 162.

4. If your system management tool does not understand SNMP Version 2.0 traps, you need to explicitly enable Version 1.0 format SNMP trap packets. Do this by following these lettered steps:

Note

If you use Insight Manager 7 to manage SNMP events on your network, you do not need to enable SNMP V1.0 traps as described below.

- a. Set the default to the directory where you want to create the file:

```
$ SET DEFAULT SYS$SYSDEVICE:[TCPIP$SNMP]
```

- b. Create the `TCPIP$VMS_SNMP_CONF.DAT` file, and edit it to include the following line:

```
trap v1 elmginkgo <ip_address>
```

where `ip_address` is the port where you want the trap notification to be sent; for example, 16.32.80.97.

- c. Set the owner and protection on this file as follows:

```
$ SET FILE/OWNER_UIC=[TCPIP$AUX,TCPIP$SNMP] -
_$ /PROT=(W:RE,G:RE,O:RWED,S:RWED) -
_$ TCPIP$VMS_SNMP_CONF.DAT
```

5. To verify that your configuration is correct, review the output from the following command:

```
$ TCPIP SHOW CONFIGURATION SNMP/FULL
```

The display should be similar to the following:

```
SNMP Configuration
Flags:      Sets
Contact:    test
Location not defined

Community   Type           Address_list
public      Read         0.0.0.0
elmginkgo   Read Write Trap 16.32.80.97, 127.0.0.1
```

Next, follow the common steps for enabling sets and traps in the next section.

2.2 Common Steps for Enabling Sets and Traps

Regardless of your TCP/IP product (TCP/IP, MultiNet or TCPware), complete the following steps:

1. Edit the file SYSS\$SPECIFIC:[WBEM.WEB.IM.WEBAGENT]WEBAGENT.INI. In the last line of the file, remove `no` from the word `noelmginkgo`, so that the line reads as follows:

```
IDS_SNMP_WRITE_COMMUNITY=elmginkgo
```

Note

The user should have SYSTEM privileges to edit the WEBAGENT.INI file.

2. If you are running the Management Agents for OpenVMS, enter the following command to stop the application:

```
$ @SYSS$SPECIFIC:[WBEM]WBEM$SHUTDOWN.COM
```

3. Enter the following pairs of commands to stop and restart SNMP:

On systems using TCP/IP, enter:

```
$ @SYSS$MANAGER:TCPIP$SNMP_SHUTDOWN
```

```
$ @SYSS$MANAGER:TCPIP$SNMP_STARTUP
```

4. Start the Management Agents for OpenVMS application by entering the following command:

```
$ @SYSS$SPECIFIC:[WBEM]WBEM$STARTUP.COM
```

5. From a web browser, connect to the system as described in Section 1, Getting Started, and then do the following to set thresholds:

- a. Click **User**.
- b. To set a trap, log in using an OpenVMS account that has WBEM\$ADMIN identifiers granted to it, and click **OK**.
- c. Click the **Management Agents for OpenVMS** icon.
- d. Click **File System Space Used**, **CPU Utilization** or **Memory Utilization**.
- e. Click **Help** for instructions on how to set thresholds for traps.

You can view a trap in any one of the following ways:

- If you are using Insight Manager 7, at the top of the window under Uncleared Events, click the event displayed in red.
- If you are not using Insight Manager 7 and would like to view the traps, run the following program:

```
$ RUN SYSS$SYSTEM:TCPIP$SNMP_TRAPRCV.EXE
```

- To view a system from Insight Manager 7, follow these steps:

- a. In the Insight Manager 7 main window, click **Settings**.
- b. Go to SNMP Community Strings for Discovery, and add `",elmginkgo"` after `"public"`, so that the line looks like this:

```
public,elmginkgo
```

- c. Select **Apply** to apply this change on Insight Manager's own schedule, or **Execute Discovery Now** to make the change immediately.

If you make an immediate change, when you next look at the SNMP Community Strings for Discovery display, `elmginkgo` appears.

2.3 Steps for Changing the Default Community Name

The default community name is `elmginkgo`. If for some reason, you want to use a different community name, follow the instructions listed below.

1. Edit the last line of the file
`SYSSSPECIFIC:[WBEM.WEB.IM.WEBAGENT]WEBAGENT.INI`, replacing `new_name` with the new name you choose:

`IDS_SNMP_WRITE_COMMUNITY=new_name`
2. Refer to the Release Notes for Compaq TCP/IP Services for OpenVMS Version 5.1 or later for further instructions.

3 Secure Sockets Layer (SSL)

This section contains the following subsections:

- Section 3.1, Introduction to Using the Secure HTTP Server for OpenVMS
- Section 3.2, Device Home Page
- Section 3.3, Configuring the Device Home Page
- Section 3.4, Security
- Section 3.5, Configuring Users and Groups

3.1 Introduction to Using the Secure HTTP Server for OpenVMS

The Management Agents for OpenVMS allows you to view subsystem and status information from a Web browser, either locally or remotely. Version 3.01 of the Management Agents for OpenVMS uses security features for the HTTP Server, including OpenVMS account login using Secure Sockets Layer (SSL), certificates, and Operating System authentication.

To view data locally, use one of the following URLs:

`https://127.0.0.1:2381/`

or

`https://localhost:2381/`

To view data remotely, use this URL:

`https://host:2381/`

For host, substitute the name of the machine or the IP address.

Note

Notice that the URL is followed by “:2381”. This is the secure port or socket number that the HP Management Agents for OpenVMS uses to communicate with the browser. If this number is not specified, your browser might attempt to connect to another Web page if the managed server is running a Web Server.

3.1.1 HP HTTP Server First-Time Initialization

During first-time initialization, the HTTP Server creates a private key and a corresponding self-signed X.509 Certificate.

Note

This initialization occurs only during the first time the HTTP Server initializes or after an administrator deletes the private key and corresponding certificate.

This certificate is a base64 encoded PEM file named CERT.PEM. The certificate is stored on the file system in the following location:

```
$ SYSS$SPECIFIC:[WBEM.WEB.IM]CERT.PEM
```

The subdirectory SYSS\$SPECIFIC:[WBEM.WEB.IM] also contains the private key. To protect the key, only administrators can access this subdirectory.

If, for any reason, you feel that the private key has been compromised and you want to generate a new private key and certificate, an administrator can delete the file SYSS\$SPECIFIC:[WBEM.WEB.IM]CERT.PEM and then restart the server. This causes the HTTP server to generate a new certificate and private key.

3.1.2 Logging in to Servers

The Login page allows you to access any of the available Web-enabled services. You can access the desired Web-enabled services by following the steps in either section 3.1.2.1, Internet Explorer Version 5.0 or later or 3.1.2.2, Netscape Version 4.73 or later and Mozilla Version 0.96 or later.

3.1.2.1 Internet Explorer Version 5.0³ or later

1. After you enter the URL https://devicename:2381, Internet Explorer displays the Security Alert dialog box shown in Figure 1 every time you connect to it. If you enter port 2301, the port used in previous versions of the Management Agents, you are directed automatically to port 2381.


Note

The Security Alert dialog box is displayed as shown in Figure 1. You are required to accept certificates to log in.

If you want to implement your own Public Key Infrastructure (PKI) or install your own generated certificates in each managed device, you can install a Certificate Authority Root Certificate in each browser to be used for management. If you do this, the Security Alert dialog box shown in Figure 1 is not displayed. You can refer to your browser's online help for more information about installing the Certificate Authority Root Certificate.


³ Internet Explorer 6.0 or later is recommended for best results.

Figure 1: Security Alert Dialog Box

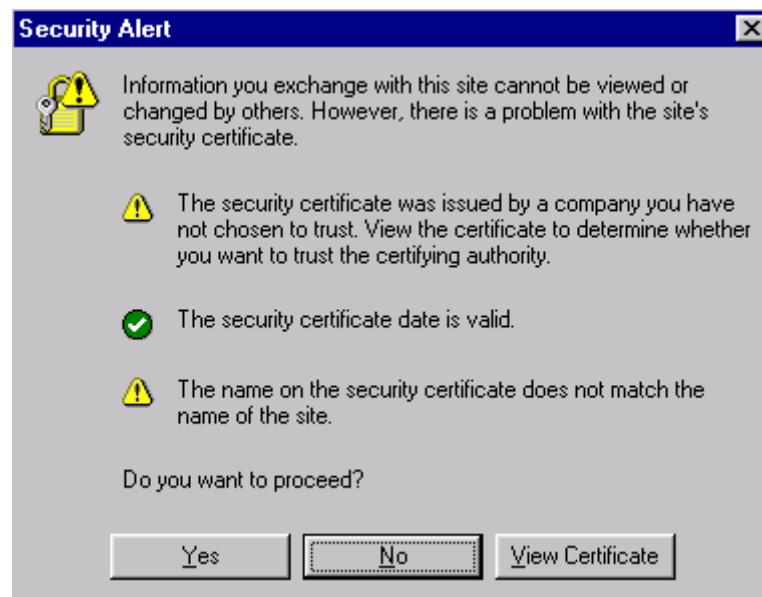

2. Click the **Yes** button. The Login page will be displayed as shown in Figure 2.

Figure 2: Login page

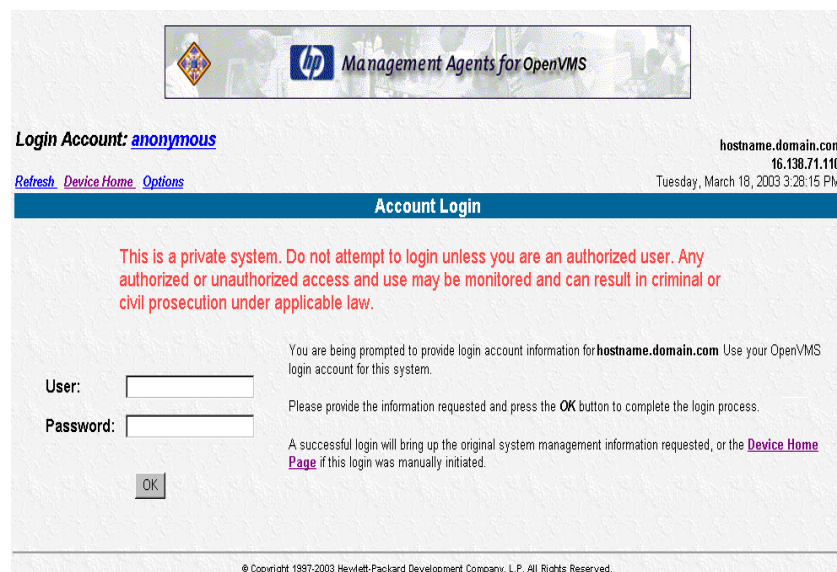

3. Enter the OpenVMS user name in the User field.
The Insight Manager accounts of the system you are logging into map to the system's OpenVMS accounts. See Section 3.5, Configuring Users and Groups, for more information.
4. Enter the OpenVMS password⁴ in the Password field.
5. Click the **OK** button. The HP WBEM Device Home Page will be displayed.

⁴ Secondary account passwords are not supported. Only the primary password will be used for authentication, even if a secondary password has been defined for the user account.

3.1.2.2 Netscape Version 4.73 or later and Mozilla Version 0.96 or later

1. After you enter the URL `https://devicename:2381`, Netscape or Mozilla displays the New Site Certificate dialog box shown in Figure 3 the first time you connect to it. If you enter port 2301, the port used in previous versions of the Management Agents, you are directed automatically to port 2381.

The steps in this section apply in general to Netscape and most implementations of the Mozilla browser. However, there may be minor differences depending on the specific version of browser you use.

Note

The New Site Certificate dialog box is displayed as shown in Figure 3. You are required to accept certificates in order to log in.

If you want to implement your own Public Key Infrastructure (PKI) or install your own generated certificates on each managed device, you can install a Certificate Authority Root Certificate in each browser to be used for management. If you do this, the New Site Certificate dialog box shown in Figure 3 is never displayed. Refer to your browser's online help for more information about installing the Certificate Authority Root Certificate.

Figure 3: New Site Certificate Dialog Box




2. Click the **Next** button and follow the on-screen instructions to accept the New Site Certificate.

If you choose Accept this certificate forever (until it expires), this dialog box is not displayed the next time you open Netscape and attempt to view this page. You will be directed to the Login page instead.

After you accept the new site certificate, the Login Page is displayed.

Figure 4: Login page

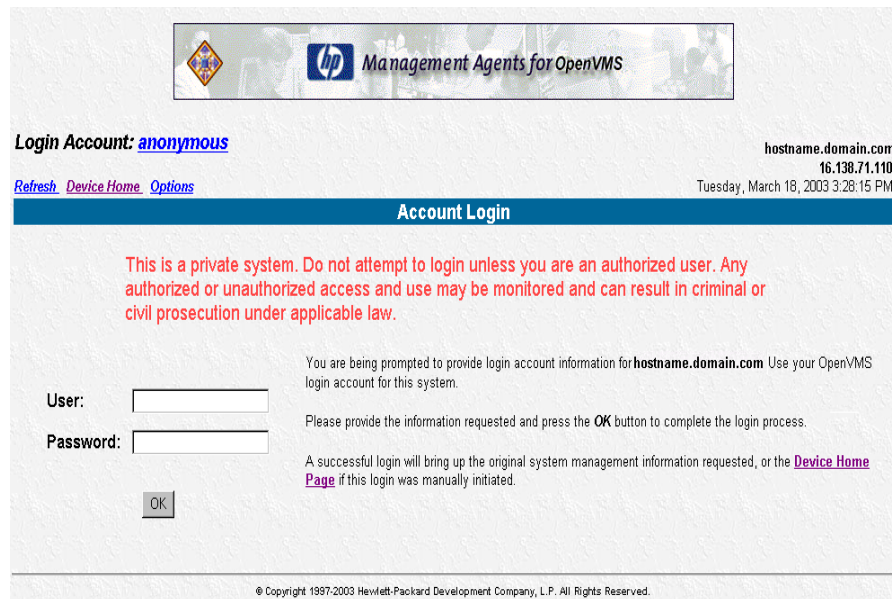

3. Enter the OpenVMS user name in the User field.
The Insight Manager accounts of the system you are logging into map to the system's OpenVMS accounts. See Section 3.5, Configuring Users and Groups, for more information.
4. Enter the OpenVMS password⁵ in the Password field.
5. Click the **OK** button. The HP WBEM Device Home Page will be displayed.

3.2 Device Home Page


The Device Home Page is the first page displayed when you access the device at port 2381 after logging in. This page displays available Web-enabled services.

Anonymous access to information is available without logging in if the administrator turns that option on in the Device Options web page. To go to the Device Options web page, select the Options link.

To log in as a different user, select the Login Account link (which will display “user”, “administrator” or “anonymous”). The login screen is displayed. See Section 3.4, Security, for more information about user accounts.

⁵ Secondary passwords are not accepted.

Figure 5: Device Home Page

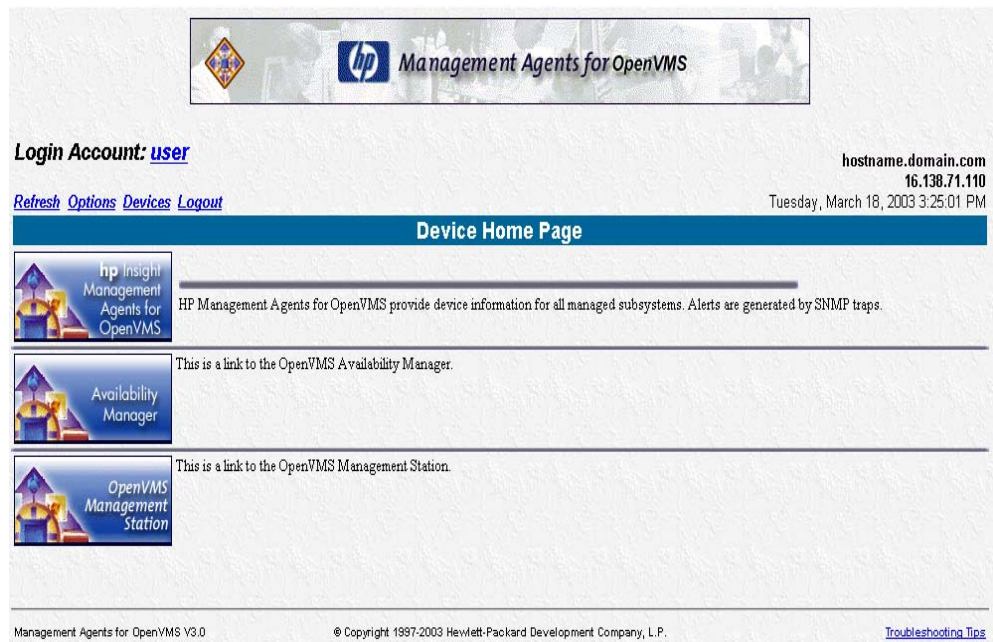

The following options are available on the Device Home Page:

Note

Other web-enabled options may appear depending on your specific environment.

- **HP Insight Management Agents for OpenVMS**
Select this link to view Subsystem and Status Information about a device that is running the Management Agents for OpenVMS.
- **OpenVMS DCL Show Commands**
Select this link to view the DCL SHOW page, which provides information about the current status of the system, as well as the users, memory, cluster, CPUs, devices and Virtual I/O cached memory on the system.
- **Availability Manager**
Select this link to view more information about the Availability Manager.
- **OpenVMS Management Station**
Select this link to view more information about the OpenVMS Management Station.
- **Login Account**
Select the corresponding link (“user”, “administrator” or “anonymous”) to change the Login account.
- **Refresh**
Select this link to reload the device information displayed on the Device Home Page.
- **Options**
Select this link to set attributes for the Management Agents for OpenVMS access and the HTTP server.

- **Devices**
Select this link to display the Device list.
- **Logout**
Select this link to log out of from the Device Home Page.
- **Troubleshooting Tips**
Select this link to view Troubleshooting Tips.

3.3 Configuring the Device Home Page

Options Page


The Options page allows you to change various Management Agents for OpenVMS settings. The Options page is accessed from the Device Home Page by clicking the Options hyperlink. The available options are divided into three groups under Page Sections, as shown in Figure 6:

- **Configuration Options**
- **Trusted Certificates**
- **Customer Generated Certificates**

Note

If you have administrator privileges, you can click the **Save Configuration** or **Default Configuration** buttons. If you have operator privileges, then you will have **Read** access.

Figure 6: Page Sections

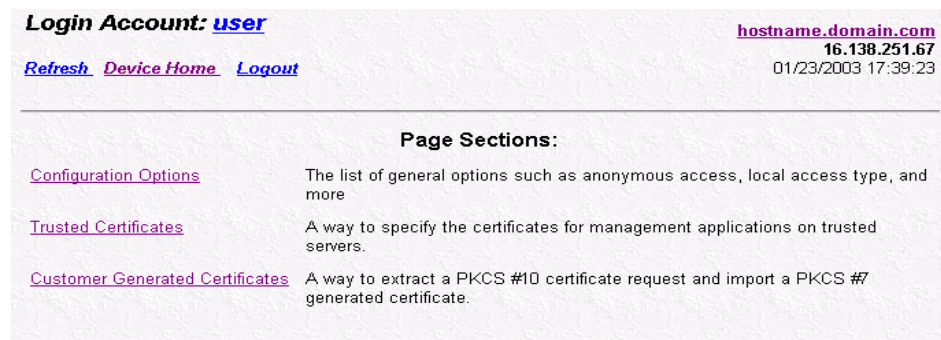

Configuration Options

The Configuration Options section allows you to select the appropriate settings:

– Anonymous Access

Anonymous Access is disabled by default. Enabling Anonymous Access allows a user to access the Management Agents for OpenVMS without logging in.

To enable Anonymous Access:

1. Select the Anonymous Access checkbox on the Configuration Options page.
2. Click the **Save Configuration** button in the Configuration Options section to save your settings. The Configuration Options page will be refreshed.

– Local Access

Set up the HTTP Server to automatically configure local IP addresses as part of the selected group. This means that any user with access to the local console is be granted full access if Administrator is

selected, or is granted limited access to unsecured pages if Anonymous is selected, without being challenged for a username and password.

– **Auto Delete Users**

Select the checkbox to automatically delete user directories that have not been accessed a given time frame. This allows you to retain information on active users, and delete old information about inactive users.

To set the Auto Delete Users option:

1. Select the Auto Delete Users checkbox.
2. In the field provided, specify the number of days you want to keep information before deleting the cached data for an unused login.

Note

The cached data referred to in this step is not needed and will regenerate automatically if it is ever needed in the future.

3. Click the **Save Configuration** button in the Configuration Options section to save your settings. You can click the **Default Configuration** button to return all options to their original settings.

– **Logging**

Logging allows you to specify the types of log entries you want to record, and whether or not you want to write to the log at all.

To set the Logging options:

1. Select the Logging checkbox to record information in the log file.
2. Select the types of logs to be recorded.
3. Click the **Save Configuration** button in the Configuration Options section to save your settings.

– **IP Restricted Logins**

The HTTP Server can restrict login access based on the IP address of the machine from which the login is attempted. These restrictions apply only to direct login attempts and not to logins attempted as part of a trusted Insight Manager 7 server's Single Login or Secure Task Execution features.

IP addresses can be explicitly excluded or explicitly included for each type of user. If an IP address is explicitly excluded, it will be excluded even if it is also explicitly included. If any IP addresses are in the inclusion list, then only those IP addresses will be allowed login access. If no IP addresses are in the inclusion list, then login access will be allowed from any IP addresses not in the exclusion list.

IP address ranges list with the lower end of the range followed by a hyphen followed by the upper end of the range. All ranges are inclusive in that the upper and lower bounds are considered part of the range. IP address ranges and single addresses are separated by semi-colons.

Enter IP address ranges in the following format:

122.23.44.1-122.23.44.255;172.84.100.35;127.0.0.0-127.0.0.255

– **Trust Mode**

The Trust Mode option allows you to select the security required by your system. Some situations require a higher level of security than others, so you are given the options shown in Figure 7.

The following Trust Mode options are available:

- Trust All
- Trust By Name
- Trust By Certificate

Figure 7: Trust Mode

Secure Trust Modes:

☒ **Trust By Certificate:**
Setup the HP HTTP Server to only accept Secure Task Execution requests and Single Login requests that have been signed by a Insight Manager 7 server with a [Trusted Certificate](#).

Other Trust Modes:
Note: These trust modes are considered less secure than certificate based trust modes. HP strongly recommends using Trust by Certificate.

Trust Mode ☐ **Trust All:**
Setup the HP HTTP Server to accept Secure Task Execution requests and Single Login requests from any server.

☐ **Trust By Name:**
Setup the HP HTTP Server to only accept Secure Task Execution requests and Single Login requests from servers with the following Insight Manager 7 server names (separate server names with commas or semi-colons).

Note

You can click the **Default Configuration** button located in the Configuration Options section to return all options to their original settings.

– **Trust All**

The Trust All mode sets up the HTTP Server to accept certain requests from any server. You might want to use Trust All if you have a secure network, and everyone in the network is trusted.

Note

Trust All mode leaves your system vulnerable to security attacks.

– **Trust By Name**

The Trust By Name mode sets up the HTTP Server to accept only certain requests from servers with the Insight Manager 7 names designated in the Trust By Name field. The Trust By Name option is easy to configure, and prevents non-malicious access. You might want to use Trust By Name if you have a secure network but your network has two groups of administrators in two separate divisions. Trust By Name would prevent one group from changing settings on the wrong system. This option does not verify anything other than the Insight Manager 7 server name submitted.

To use the Trust By Name option:

1. Select the Trust By Name option.
2. Enter the name of the server you want to allow access. If you want to trust more than one Insight Manager 7 server, you can separate the server names with a semi-colon.

Note

Although Trust By Name mode is a slightly stronger method of security than the Trust All mode, it still leaves your system vulnerable to security attacks.

Trust By Certificate

The Trust by Certificate mode sets up the HTTP Server to accept only certain requests from Insight Manager 7 servers with Trusted Certificate as shown in Figure 8. This mode requires the submitted server to provide authentication by means of certificates. This mode is the strongest method of security, because it requires certificate data before allowing access.

Figure 8: Trusted Certificates

Trusted Certificates

Certificates are used to establish the trust relationship between Insight Manager 7 and the HP HTTP Server. To add a certificate to the Trusted Certificates List, cut and paste the base64 encoded certificate into the text box and press the 'Submit Cert' button.

Insight Manager 7 Certificate Data:

HP Insight Manager 7 certificates can also be retrieved through HTTP requests. To retrieve the public certificate, enter the server name in the text box below.

Insight Manager 7 Server Name:

To use the Trust by Certificate option:

1. In the Insight Manager 7 Server Name field, enter the name of the server from which you want to receive a certificate.
2. Click the **Get Cert** button. The certificate data is displayed.
3. Click the **Options** hyperlink. The bottom of the page should display the Insight Manager 7 servers you currently trust. You can click the View Certificate hyperlink associated with the Insight Manager 7 server to view certificate information related to that server.

Note

If Insight Manager 7 is reinstalled or has regenerated a certificate, you must remove the trusted servers and start again with Step 1.

Customer Generated Certificates

The Customer Generated Certificates option allows you to use certificates that are not generated by HP. If you select this option, the self-signed certificate that was originally generated by the HTTP Server is replaced with one that was issued by a Certificate Authority. The first step of the process is to have the HTTP Server create a Certificate Request (PKCS #10). This request utilizes the original private key that was associated with the self-signed certificate and generates the appropriate data for certificate request.

Note

The private key never leaves the server during this process.

After the PKCS #10 data has been created, you need to send that data off to a Certificate Authority. After the Certificate Authority has returned PKCS #7 data, you need to import this into the HTTP Server. After the PKCS #7 data has been successfully imported, the original certificate file SYSS\$SPECIFIC:[WBEM.WEB.IM]CERT.PEM is overwritten with the device's certificate from that PKCS #7 envelope. The same private key is used for the new imported certificate as well as for the previous self-signed certificate.

Figure 9: Customer Generated Certificates

Customer Generated Certificates

The HTTP Server can create Certificate Request (PKCS #10) data which can be sent to a Certificate Authority (CA) at a later time. This data is base64 encoded. The CA will process this request and return a response file (PKCS #7) which can be imported into the HP HTTP Server. Use the button below to create the PKCS #10 Certificate Request data.

Create PKCS #10 Data

The HP HTTP Server imports base64 encoded PKCS #7 data which a Certificate Authority returned based upon an earlier Certificate Request (PKCS #10). Cut and paste the PKCS #7 information into the text box below and press the button below to import it into the HP HTTP Server.

PKCS #7 Data:

Import PKCS #7 Data

To use the Customer Generated Certificates option:

1. Click the **Create PKCS #10 Data** button. A screen is displayed indicating that the PKCS #10 Certificate Request data has been successfully generated.
2. Copy the certificate data by copying the data.
3. Send PKCS #10 certificate request data to a Certificate Authority and ask to have the certificate request reply data sent in PKCS #7 format. Request that the reply data be in base64 encoded format. If your organization has its own PKI/Certificate Server, send the PKCS #10 data to the Certificate Authority manager and request the PKCS #7 reply data.

Note

The selected certificate signer generally charges a fee.

3.4 Security

The Management Agents for OpenVMS allows SNMP SET's for some system parameters. This capability requires you to configure OpenVMS user accounts to map to the Management Agents administrator and operator accounts. See Section 3.5, Configuring Users and Groups, for more information.

There are two types of data: Default (read only) and Sets (read/write). The WEBAGENT.INI file located in the SYS\$SPECIFIC:[WBEM.WEB.IM.WEBAGENT] directory specifies the level of user who has access to data.

The "read=" and "write=" entries in the WEBAGENT . INI file set the user accounts required for access, where: 0 = No access, 1 = Anonymous, 2 = User, 3 = Operator, and 4 = Administrator. Changing these entries changes the security of the Web-enabled services.

3.5 Configuring Users and Groups

You can configure access to the Management Agents for OpenVMS by using the SYSUAF utility to grant identifiers to users for Insight Manager groups.

You must grant the identifiers WBEM\$ADMIN and WBEM\$OPERATOR, which map directly to the HTTP server's Administrator and Operator accounts. Every user who has access to the system, including the SYSTEM account, automatically has Operator access to the Management Agents running on that system. Anonymous access is disabled by default.

Note

Do not use a semicolon (;) in the username field.

To configure access for specific users and groups:

1. Log in as SYSTEM on the OpenVMS system.
2. Grant the WBEM\$ADMIN identifier to users who will have administrator privileges. In this example, the SYSTEM account is granted administrator privileges.

```
UAF> GRANT/IDENTIFIER WBEM$ADMIN SYSTEM
```

3. All other users have the WBEM\$OPERATOR identifier, even if it has not been explicitly granted.

Note

On a cluster, you will need to perform this step only once for user accounts that are visible across the cluster. The privileges are automatically available to all nodes on the cluster.

4 Troubleshooting Tips

This section contains the following categories of troubleshooting tips:

- Section 4.1, System Requirements for Running the Software
- Section 4.2, Browser Requirements
- Section 4.3, Browser Recommendations
- Section 4.4, Known Browser Issues
- Section 4.5, Viewing Cluster Agents
- Section 4.6, Troubleshooting Questions and Answers

4.1 System Requirements for Running the Software

The system requirements for the Management Agents for OpenVMS are the following:

- hp Secure Sockets Layer (SSL) Version 1.1 or later for OpenVMS Alpha.

Note

For more information about hp Secure Sockets Layer (SSL), refer to the hp SSL Installation Guide and Release Notes.

- TCP/IP Version 5.1 or later
- A supported web browser

Process Software's MultiNet TCP/IP Version 4.3 for OpenVMS or later and TCPware TCP/IP Version 5.5 for OpenVMS or later are also supported.

4.2 Browser Requirements

The browser you use with the Management Agents for OpenVMS must have the following features supported and enabled:

- HTML tables
- HTML frames

- JavaScript
- Accept all cookies
- Full Java Development Kit 1.1 (JDK 1.1) or later support
- Dynamic HTML

4.3 Browser Recommendations

Recommendations of browsers to use with the Management Agents are the following:

- Microsoft Internet Explorer 5.0⁶ or later
- Netscape Navigator 4.73 or later
- HP Secure Web Browser for OpenVMS Alpha 0.96 or later (Mozilla)

Note

If you are using HP Secure Web Browser, you must install the Java plugins SDK Version 1.3.1-2 for OpenVMS Alpha.

For more information about HP Secure Web Browser, refer to the following URL:

<http://www.mozilla.org/releases>

Additional browsers, or the browsers mentioned if used with different operating systems, might or might not work correctly, depending upon their specific implementations of the required browser technologies.

4.4 Known Browser Issues

The following are some known issues in using a browser with the Management Agents for OpenVMS:

- If you use a proxy server to access the Internet and you are unable to access a machine that has web-enabled agents installed with a URL such as <https://127.0.0.1:2381/> or <https://125.12.18.36:2381/>, try adding the address to the No Proxy list in the browser.
- Internet Explorer does not print background colors and images by default.
- When switching from a web agent browser window to another application, you might see the colors in the browser window change or flash. This is not specific to the web agent window but might happen when you look at other pages with a browser under the same conditions.
- Frame sizes are optimized for "medium" fonts. If you switch your browser to use larger or smaller fonts, you must use the mouse to manually adjust the frame layout.
- A JavaScript error can occur when you resize the browser window in Netscape Navigator.
- A JavaScript error can occur when you try to print certain pages in Netscape Navigator.
- If you use HP Secure Web Browser (Mozilla) or Netscape Version 6.2 and later and attempt to log in with a different user name, the login screen may reappear with the new user name listed instead of the Device Home Page. If this happens, click the "Device Home Page" link displayed on the page to manually switch to the device page.
- With Internet Explorer 5.5 and update version SP1;Q288993; Q290108; Q299618, manually refreshing the utilization pages may cause the WBEM\$SERVER process to hang. Upgrading to Internet Explorer 5.5 SP2 solves this problem.

⁶ Internet Explorer 6.0 is recommended.

4.5 Viewing Cluster Agents

To view OpenVMS clusters from Insight Manager 7, you need to perform the following sets of steps:

On an OpenVMS Cluster

1. Ensure that the Management Agents for OpenVMS are running by executing the following DCL command:

```
$ SHOW SYS/PROC=WBEM*
```

Verify that the process `WBEM$SVRCLU` is listed.

On Insight Manager 7

1. Use the Settings link to add the IP address of the OpenVMS Cluster to the address range for Auto detection.
2. Select Settings => Cluster Monitor => User Settings.
3. Select users from the dropdown list, and add clusters to the available list for each user. Each user will obtain access only to the clusters specified.

Refer to online help on the Insight Manager 7 pages for details.

4.6 Troubleshooting Questions and Answers

This section provides answers to frequently asked questions.

Q: I can access the Device Home Page, but I can't access the URL pointed to by the "Management Agents for OpenVMS" logo.

A: Check the "Language Preference Window" in your Internet Explorer setup (Tools => Internet Options => Language). The Management Agents for OpenVMS expects your first language selection to be "English."

Q: Why does the "Version" display indicate Version 5.5?

A: Version 5.5 is the MIB level that the HP SNMP subagents support. The version of the Management Agents for OpenVMS kit you are using is not the same as the version of the MIB that is supported. You can find the version of your kit at the bottom of the Device Home Page, next to the copyright notice.

Q: One of my subagents (MIBs) is not running.

A: Define a foreign command and use TRACE to give an indication of failure. For example:

```
$ STORAGE :== $SYS$SPECIFIC:[WBEM.AGENTS]CPQSTORAGE_MIB.EXE
$ STORAGE -TRACE
```

If this does not help you debug the subagent, mail the output of these commands to HP Technical Support. (The address is provided at the end of this section.)

Note, however, that the `WBEM$SVRCLU` subagent runs only on clustered systems.

Q: I can access the Device Home Page, but no links to agents are on the page. Why?

A: This occurs if JavaScript is not supported or enabled. If you are using a recommended browser, ensure that JavaScript is enabled.

Q: When I try to log in, I get a Java error, and I am not prompted for account and password. Why?

A: This occurs if the browser does not fully support JDK 1.1 or later Java applets or if Java support has been disabled. Ensure that Java support is enabled in the browser. If it is not, upgrade to a browser that fully supports JDK 1.1 or later Java applets.

Q: Is there an easier way to access the local device with my browser without having to find out its IP address?

A: Yes. You can access the local device at `https://localhost:2381`; for example, `https://127.0.0.1:2381`. Also, if you have a proxy server configured in your browser, you might need to add the host (for example, 127.0.0.1) to the list of addresses that should NOT be proxied.

Q: I can successfully access some web-enabled devices, but I cannot access others. Why?

A: If your browser has a proxy server configured, you must enter the address of the web-enabled device in the list of addresses that should NOT be proxied.

Q: When I access a device, I am prompted many times to accept cookies. Why?

A: Browser cookies are required to keep track of user state and security. Enable cookies in the browser, and disable prompting for acceptance of cookies.

Q: I entered a valid account and password to change my access level. It was accepted, but the web page still indicates that I have only Anonymous access. Why?

A: This can occur if browser cookies are disabled. Enable cookies in the browser. They are required for security.

Q: Leaving my browser undisturbed for a while prompted for login. I entered a valid account and password, but still the login was rejected. Why?

A: This can occur if browser cookies are disabled. Enable cookies in the browser. They are required for security. This will allow you to log in to your system.

Q: The Management Agents appear to hang on the Summary page or sometimes on the Device Home Page; at other times, I keep getting a login prompt even after I enter login information.

A: You must have a public read community defined. Here is how to do that:

First, determine your SNMP settings:

```
TCPIP> SHOW CONFIGURATION SNMP
```

You should see a display similar to the following:

```
SNMP Configuration
Flags:
Contact: test
Location not defined
Community Type
public      Read
```

If you do not see a Community "public" with type Read, set one up by entering the following:

```
$ TCPIP SET CONFIGURATION SNMP -
_$ /COMMUNITY="public" /TYPE=READ
```

Q: Sometimes I cannot get the agents to run; at other times, I get a login prompt even after I enter login information.

A: If you have the Version 1.0 product installed and you enter a POLYCENTER Software Installation (PCSI) PRODUCT REMOVE command, PCSI does not remove all the files that the V1.0 product created. You must delete the files and reinstall the V3.01 kit as follows:

1. Stop any running agents from the account in which they were started. For versions prior to Version 2.0, enter the following command:

```
$ @SYS$SPECIFIC:[WBEM] STOP_WEBAGENTS
```

For Version 2.1 and later, enter the following command:

```
$ @SYS$SPECIFIC:[WBEM] WBEM$SHUTDOWN
```

Use the DCL command `$ SHOW SYSTEM` to make sure the agents are stopped.

2. Delete everything in the `SYS$SPECIFIC:[WBEM...]` directory.
3. Reinstall Version 3.01 (refer to the Installation Guide).

Q: I keep getting Java errors or other display errors even after I make the suggested fixes.

A: Follow these steps:

1. Clear the cache in your browser. Do this by selecting the Settings option in Internet Explorer (View or Tools, Internet Options, Settings, General, and View Files) and deleting any files that might have been saved.
2. Delete the references of cookies from the browser. This is especially necessary if other changes in your environment were made and you have not exited from your browser since those changes were made.
3. Verify that you are running a current or supported browser, or both, that supports dynamic HTML. The Management Agents work with Microsoft Internet Explorer Version 5.0 or later and with Netscape Navigator Version 4.73 or later.

Q: I am getting a PCSI error part-way through my installation:

The following product will be installed to destination:

COMPAQ AXPVMS V72_MGMTAGENTS V2.0-16 DISK\$ALPHASYS-72:[VMS\$COMMON.]

Portion done: 0%...10%...20%...30%...40%

%PCSI-E-READERR, error reading

\$6\$DKA300:[SYS0.][SYSUPD]COMPAQ-AXPVMS-V72_MGMTAGENTS-V0200-16-1.PCSI;1

-DDIS-E-TNF, invalid element syntax

%PCSI-E-OPFAILED, operation failed

Terminating is strongly recommended. Do you want to terminate? [YES]

%PCSI-E-CANCEL_WIP, termination resulted in an incomplete modification to the system

%PCSI-E-S_OPCAN, operation cancelled by request

%PCSIUI-E-ABORT, operation terminated due to an unrecoverable error condition

A: You probably have a corrupt kit. The PCSI kit must be in fixed-length, 8192-byte CR format. Please verify the file attributes and copy a new kit to your target machine.

Q: I enter everything to start the Management Agents for OpenVMS, but it does not run.

A: Make sure that SNMP is running.

Q: Importing certificates created with certain SSL tools to the Management Agents for OpenVMS results in one of the following error messages:

- The certificates are not of base64 encoded format
- Unable to add certificate

A: Certificates created using most SSL tools can be used with the Management Agents for OpenVMS. To add a certificate to the Trusted Certificates list, cut and paste the base64 encoded certificate into the text box and press the "Submit Cert" button. Take care to copy and paste the entire contents of the certificate including the "--Begin Certificate--" and "--End Certificate--" lines before pressing the "Submit Cert" button. If the certificate generated by your tool does not contain the "--Begin Certificate--" and "--End Certificate--" lines, you need to add them yourself.

- Q: Upon using Internet Explorer version 5.5 Service Pack 1 or later with Management Agents Version 3.01, Internet Explorer generates an error message occasionally that indicates that the page could not be displayed.
- A: Please refer to Microsoft Knowledge Base Article - 305217 titled "Page Cannot Be Displayed Error During SSL 3.0 Server Session Timeout" to know more on the cause and refer to Microsoft Knowledge Base Article - 183110 titled "INFO: WinInet Limits Connections Per Server" for information on workarounds available for this problem.
- Q: I cannot get into agents from Insight Manager 7 SP2 application or directly through a browser. If connect to the 2301 port I get the security alert, then the redirect and "Page cannot be displayed" message on the browser?
- A: Check if DSNLink is installed on the system. DSN_Tunnel process uses port 2381. Edit the dsn_services.dat file and change the dsn_tunnel port from 2381 to 12381. Rebuild Worldwide configuration. Restart WBEM.
- Q: In spite of configuring SNMP and Management agents on a TCPware or Multinet stack correctly, I find Management agents don't work correctly
- A: Check for public community entry in SNMP configuration file on TCPware or Multinet. The public community entry in the file snmpd.conf should read as follows:
- The entries in the file tcpware:snmpd.conf or multinet:snmpd.conf should be as follows
(Assuming IP address of the target system is 192.168.0.18) :
- ! Communities:
- ! community <community name> <internet address> <READ-ONLY|READ-WRITE|TRAPS>
- !
- community public 127.0.0.1 READ-ONLY

Note

When you enter a problem report, the development engineers will need your configuration and the output of some of the following commands:

```
$ PRODUCT SHOW HISTORY/FULL
$ SHOW SYSTEM
$ SHOW PROCESS/QUOTA/ID=(the id for the WBEM$SERVER process)
$ SHOW PROCESS/ACCOUNT/ID=(the id for the WBEM$SERVER process)
$ TCPIP SHOW CONFIGURATION SNMP/FULL
$ INSTALL LIST SYS$SHARE:PCSI$SHR.EXE
$ DIR/PROT SYS$SPECIFIC:[WBEM...]*.TPL
$ DIR/PROT SYS$SPECIFIC:[000000]WBEM.DIR
$ DIR/PROT SYS$SPECIFIC:[WBEM]*.DIR
$ TCPIP SHOW VERSION/ALL
```

If you need additional help, use your normal support channels, or send email to HP Technical Support from the following URL:

<http://wwsslpro.compaq.com/support/home/selectproduct.asp?destination=contact&pid=-1>

5 Appendix

This section lists all the SNMP MIB Variables (Attributes) and Traps supported by the Management Agents for OpenVMS Version 3.01.

cpqHealth Agent

Attributes:

cpqHeMibRev Group

- cpqHeMibRevMajor
- cpqHeMibRevMinor
- cpqHeMibCondition

cpqHeOsCommon

- cpqHeOsCommonPollFreq

cpqHePostMsg

- cpqHePostMsgCondition
- cpqHePostMsgIndex
- cpqHePostMsgCode
- cpqHePostMsgDesc

cpqHeThermal

- cpqHeThermalCondition
- cpqHeThermalDegradedAction
- cpqHeThermalTempStatus
- cpqHeThermalSystemFanStatus
- cpqHeThermalCpuFanStatus
- cpqHeThermalFanIndex
- cpqHeThermalFanRequired
- cpqHeThermalFanPresent
- cpqHeThermalFanCpuFan
- cpqHeThermalFanStatus

cpqHeTemperature

- cpqHeTemperatureChassis
- cpqHeTemperatureIndex
- cpqHeTemperatureLocale
- cpqHeTemperatureCelsius
- cpqHeTemperatureThreshold
- cpqHeTemperatureCondition

cpqHeFltTolPwrSupply

- cpqHeFltTolPwrSupplyCondit

cpqHeCriticalErrorTable

- cpqHeCriticalErrorIndex
- cpqHeCriticalErrorStatus
- cpqHeCriticalErrorType
- cpqHeCriticalErrorTime

Traps:

- cpqHe3ThermalTempDegraded
- cpqHe3ThermalTempOK
- cpqHe3ThermalSystemFanFailed
- cpqHe3ThermalSystemFanOK
- cpqHe3FltTolPwrSupplyDegraded

cpqHost Agent

Attributes:

cpqHoCpuUtilEntry

- cpqHoCpuUtilUnitIndex
- cpqHoCpuUtilMin
- cpqHoCpuUtilFiveMin
- cpqHoCpuUtilThirtyMin
- cpqHoCpuUtilHour

cpqHoFileSysTable

- cpqHoFileSysIndex
- cpqHoFileSysDesc
- cpqHoFileSysSpaceTotal
- cpqHoFileSysSpaceUsed
- cpqHoFileSysPercentSpaceUsed

cpqHoInfo

- cpqHoName
- cpqHoVersion
- cpqHoDesc
- cpqHoOsType
- cpqHoTelnet

cpqHoMibRev

- cpqHoMibRevMajor
- cpqHoMibRevMinor
- cpqHoMibCondition

cpqHoOsCommon

- cpqHoOsCommonPollFreq

cpqHoSWRunning Table

- cpqHoSWRunningIndex
- cpqHoSWRunningName
- cpqHoSWRunningDesc

cpqHoSwVerTable

- cpqHoSwVerIndex
- cpqHoSwVerName
- cpqHoSwVerDescription
- cpqHoSwVerLocation
- cpqHoSwVerVersion

cpqHoSystemStatus

- cpqHoMibStatusArray

Traps:

None

cpqStore Agent

Attributes (IDE):

cpqIdeMibRev

- cpqIdeMibRevMajor

```

        cpqIdeMibRevMinor
        cpqIdeMibCondition

cpqIdeOsCommon
    cpqIdeOsCommonPollFreq
Attributes (SCSI):
cpqScsiCntlrTable
    cpqScsiCntlrIndex
    cpqScsiCntlrBusIndex
    cpqScsiCntlrModel
    cpqScsiCntlrSlot
    cpqScsiCntlrStatus
    cpqScsiCntlrCondition
    cpqScsiCntlrSerialNum
    cpqScsiCntlrBusWidth

cpqScsiMibRev
    cpqScsiMibRevMajor
    cpqScsiMibRevMinor

cpqScsiOsCommon
    cpqScsiOsCommonPollFreq

cpqScsiOsCommonModuleTable
    cpqScsiOsCommonModuleIndex
    cpqScsiOsCommonModuleName
    cpqScsiOsCommonModulePurpose

cpqScsiPhyDrvTable
    cpqScsiPhyDrvCntlrIndex
    cpqScsiPhyDrvBusIndex
    cpqScsiPhyDrvIndex
    cpqScsiPhyDrvModel
    cpqScsiPhyDrvFWRev
    cpqScsiPhyDrvVendor
    cpqScsiPhyDrvSize
    cpqScsiPhyDrvScsiId
    cpqScsiPhyDrvStatus
    cpqScsiPhyDrvHighReadSectors
    cpqScsiPhyDrvLowReadSectors
    cpqScsiPhyDrvHighWriteSectors
    cpqScsiPhyDrvLowWriteSectors
    cpqScsiPhyDrvHardReadErrs
    cpqScsiPhyDrvSeekErrs
    cpqScsiPhyDrvUsedReallocs
    cpqScsiPhyDrvCondition
    cpqScsiPhyDrvSerialNum
    cpqScsiPhyDrvLocation
    cpqScsiPhyDrvParent
    cpqScsiPhyDrvSectorSize
    cpqScsiPhyDrvHotPlug
    cpqScsiPhyDrvPlacement

cpqScsiTargetTable
    cpqScsiTargetCntlrIndex
    cpqScsiTargetBusIndex

```

cpqScsiTargetScsiIdIndex
cpqScsiTargetType
cpqScsiTargetModel
cpqScsiTargetFWRev
cpqScsiTargetVendor
cpqScsiTargetLocation
cpqScsiTargetPhyWidth

Attributes (Fiber Channel):

cpqFcaCntlrBoxIndex
cpqFcaCntlrBoxIoSlot
cpqFcaCntlrModel
cpqFcaCntlrFWRev
cpqFcaCntlrStatus
cpqFcaCntlrCondition
cpqFcaCntlrProductRev
cpqFcaCntlrWorldWideName
cpqFcaCntlrSerialNumber
cpqFcaCntlrCurrentRole
cpqFcaCntlrRedundancyType
cpqFcaCntlrRedundancyError
cpqFcaPhyDrvBoxIndex
cpqFcaPhyDrvIndex
cpqFcaPhyDrvModel
cpqFcaPhyDrvFWRev
cpqFcaPhyDrvBay
cpqFcaPhyDrvStatus
cpqFcaPhyDrvUsedReallocs
cpqFcaPhyDrvRefHours
cpqFcaPhyDrvHReads
cpqFcaPhyDrvReads
cpqFcaPhyDrvHWrites
cpqFcaPhyDrvWrites
cpqFcaPhyDrvHSeeks
cpqFcaPhyDrvSeeks
cpqFcaPhyDrvHardReadErrs
cpqFcaPhyDrvRecvReadErrs
cpqFcaPhyDrvHardWriteErrs
cpqFcaPhyDrvRecvWriteErrs
cpqFcaPhyDrvHSeekErrs
cpqFcaPhyDrvSeekErrs
cpqFcaPhyDrvSpinupTime
cpqFcaPhyDrvFunctTest1
cpqFcaPhyDrvFunctTest2
cpqFcaPhyDrvFunctTest3
cpqFcaPhyDrvOtherTimeouts
cpqFcaPhyDrvBadRecvReads
cpqFcaPhyDrvBadRecvWrites
cpqFcaPhyDrvFormatErrs
cpqFcaPhyDrvNotReadyErrs
cpqFcaPhyDrvHasMonInfo
cpqFcaPhyDrvCondition
cpqFcaPhyDrvHotPlugs
cpqFcaPhyDrvMediaErrs
cpqFcaPhyDrvHardwareErrs
cpqFcaPhyDrvAbortedCmds
cpqFcaPhyDrvSpinUpErrs
cpqFcaPhyDrvBadTargetErrs
cpqFcaPhyDrvSize
cpqFcaPhyDrvBusFaults

cpqFcaPhyDrvHotPlug
cpqFcaPhyDrvPlacement
cpqFcaPhyDrvBusNumber
cpqFcaPhyDrvSerialNum
cpqFcaPhyDrvPreFailMonitoring
cpqFcaPhyDrvCurrentWidth
cpqFcaPhyDrvCurrentSpeed

Traps:

None

cpqSysInfo Agent

Attributes:

cpqSiAsset
 cpqSiSysSerialNum
cpqSiMibRev
 cpqSiMibRevMajor
 cpqSiMibRevMajor
 cpqSiMibCondition

cpqSiOsCommon
 cpqSiOsCommonPollFreq

cpqSiSystemBoard
 cpqSiProductId
 cpqSiProductName

Traps:

None

cpqStdEquip Agent

Attributes:

cpqSeCpuCacheTable
 cpqSeCpuCacheUnitIndex
 cpqSeCpuCacheLevelIndex
 cpqSeCpuCacheSize
 cpqSeCpuCacheSpeed
 cpqSeCpuCacheStatus
 cpqSeCpuCacheWritePolicy

cpqSeCpuTable
 cpqSeCpuUnitIndex
 cpqSeCpuSlot
 cpqSeCpuName
 cpqSeCpuSpeed
 cpqSeCpuStatus
 cpqSeCpuExtSpeed
 cpqSeCpuDesigner
 cpqSeCpuThreshPassed

cpqSeEisaFunctTable
 cpqSeEisaFunctSlotIndex
 cpqSeEisaFunctIndex

```

        cpqSeEisaFunctType
        cpqSeEisaFunctCfgRev
        cpqSeEisaFunctSels

cpqSeFixedDiskTable
    cpqSeFixedDiskIndex
    cpqSeFixedDiskType
    cpqSeFixedDiskCyls
    cpqSeFixedDiskHeads
    cpqSeFixedDiskSectors
    cpqSeFixedDiskCapacity
cpqSeFloppyDiskTable
    cpqSeFloppyDiskIndex
    cpqSeFloppyDiskType

cpqSeFpuTable
    cpqSeFpuUnitIndex
    cpqSeFpuChipIndex
    cpqSeFpuSlot
    cpqSeFpuName
    cpqSeFpuSpeed
    cpqSeFpuType

cpqSeMemory
    cpqSeTotalMem
    cpqSeBaseMem

cpqSeMibRev
    cpqSeMibRevMajor
    cpqSeMibRevMinor
    cpqSeMibCondition

cpqSeOsCommon
    cpqSeOsCommonPollFreq

cpqSeParallelPort Table
    cpqSeParallelPortIndex
    cpqSeParallelPortAddr
    cpqSeParallelPortDesc

cpqSePciSlot Table
    cpqSePciSlotBusNumberIndex
    cpqSePciSlotDeviceNumberIndex
    cpqSePciPhySlot
    cpqSePciSlotSubSystemID
    cpqSePciSlotBoardName

cpqSeRom
    cpqSeSysRomVer

cpqSeSerialPort Table
    cpqSeSerialPortIndex
    cpqSeSerialPortAddr
    cpqSeSerialPortDesc

```

Traps:

None

cpqThresh Agent**Attributes:**

cpqMeAlarm
 cpqMeAlarmNextIndex
cpqMeMibRev
 cpqMeMibRevMajor
 cpqMeMibRevMinor
 cpqMeMibCondition
 cpqMeAlarmIndex
 cpqMeAlarmInterval
 cpqMeAlarmVariable
 cpqMeAlarmSampleType
 cpqMeAlarmValue
 cpqMeAlarmStartupAlarm
 cpqMeAlarmRisingThreshold
 cpqMeAlarmFallingThreshold
 cpqMeAlarmPermanence
 cpqMeAlarmOwner
 cpqMeAlarmStatus

Traps:

cpqMeRisingAlarmExtended
cpqMeFallingAlarmExtended

cpqNIC Agent**Attributes:**

cpqNicMibRevMajor
cpqNicMibRevMinor
cpqNicMibCondition

cpqNicIfLogMapIndex
cpqNicIfLogMapIfNumber
cpqNicIfLogMapDescription
cpqNicIfLogMapGroupType
cpqNicIfLogMapAdapterCount
cpqNicIfLogMapAdapterOKCount
cpqNicIfLogMapPhysicalAdapters
cpqNicIfLogMapMACAddress
cpqNicIfLogMapSwitchoverMode
cpqNicIfLogMapCondition
cpqNicIfLogMapStatus
cpqNicIfLogMapNumSwitchovers

cpqNicIfLogMapOverallCondition

cpqNicIfPhysAdapterPort
cpqNicIfPhysAdapterSlot
cpqNicIfPhysAdapterIoAddr
cpqNicIfPhysAdapterMemAddr
cpqNicIfPhysAdapterEntry.length
cpqNicIfPhysAdapterIndex
cpqNicIfLogMapAdapterCount

cpqNicIfLogMapGroupType
cpqNicIfLogMapDescription
cpqNicIfLogMapStatus
cpqNicIfPhysAdapterIfNumber
cpqNicIfPhysAdapterRole
cpqNicIfPhysAdapterStatus
cpqNicIfPhysAdapterDuplexState
cpqNicIfPhysAdapterDma
cpqNicIfPhysAdapterIrq
cpqNicIfPhysAdapterMACAddress
cpqNicIfPhysAdapterGoodReceives
cpqNicIfPhysAdapterGoodTransmits
cpqNicIfPhysAdapterBadReceives
cpqNicIfPhysAdapterBadTransmits
cpqNicIfPhysAdapterAlignmentErrors
cpqNicIfPhysAdapterCarrierSenseErrors
cpqNicIfPhysAdapterFrameTooLongs
cpqNicIfPhysAdapterMultipleCollisionFrames
cpqNicIfPhysAdapterFCSErrors
cpqNicIfPhysAdapterLateCollisions
cpqNicIfPhysAdapterInternalMacReceiveErrors
cpqNicIfPhysAdapterSingleCollisionFrames
cpqNicIfPhysAdapterExcessiveCollisions
cpqNicIfPhysAdapterDeferredTransmissions
cpqNicIfPhysAdapterInternalMacTransmitErrors
cpqNicIfPhysAdapterCondition
cpqNicIfPhysAdapterState
cpqNicIfPhysAdapterStatsValid

Traps:

None

svrClu Agent

Attributes:

svrCluMibMajorRev
svrCluMibMinorRev
svrCluSoftwareVendor
svrCluSoftwareVersion
svrCluSoftwareStatus
svrCluClusterType
svrCluExtensionOID
svrCluThisMember
svrCluClusterName
svrCluMemberIndex
svrCluMemberName
svrCluMemberComment
svrCluMemberStatus
svrCluMemberAddressIndex
svrCluMemberAddressIndex

Traps:

svrCluMemberAdded
svrCluMemberDeleted

cpqIDA Agent

Attributes:

cpqDaMibRevMajor
cpqDaMibRevMinor
cpqDaMibCondition
cpqDaOsCommonPollFreq
cpqDaCntlrIndex
cpqDaCntlrModel
cpqDaCntlrFWRev
cpqDaCntlrStndIntr
cpqDaCntlrSlot
cpqDaCntlrCondition
cpqDaCntlrProductRev
cpqDaCntlrPartnerSlot
cpqDaCntlrCurrentRole
cpqDaCntlrBoardStatus
cpqDaCntlrPartnerBoardStatus
cpqDaCntlrBoardCondition
cpqDaCntlrPartnerBoardCondition
cpqDaCntlrDriveOwnership
cpqDaCntlrSerialNumber
cpqDaCntlrRedundancyType
cpqDaCntlrRedundancyError
cpqDaCntlrAccessModuleStatus
cpqDaCntlrDaughterBoardType
cpqDaCntlrHwLocation

cpqDaAccelCntlrIndex
cpqDaAccelStatus
cpqDaAccelMemory
cpqDaAccelBadData
cpqDaAccelErrCode
cpqDaAccelBattery
cpqDaAccelReadErrs
cpqDaAccelWriteErrs
cpqDaAccelCondition
cpqDaAccelReadMemory
cpqDaAccelSerialNumber
cpqDaAccelTotalMemory
cpqDaLogDrvCntlrIndex
cpqDaLogDrvIndex
cpqDaLogDrvFaultTol
cpqDaLogDrvStatus
cpqDaLogDrvAutoRel
cpqDaLogDrvRebuildBlks
cpqDaLogDrvHasAccel
cpqDaLogDrvAvailSpares
cpqDaLogDrvPhyDrvIDs
cpqDaLogDrvCondition
cpqDaLogDrvPercentRebuild
cpqDaLogDrvStripeSize
cpqDaLogDrvOsName
cpqDaSpareCntlrIndex
cpqDaSparePhyDrvIndex
cpqDaSpareStatus
cpqDaSpareReplacedDrv
cpqDaSpareRebuildBlks
cpqDaSpareCondition
cpqDaSpareBusNumber
cpqDaSpareBay
cpqDaSpareReplacedDrvBusNumber
cpqDaSpareReplacedDrvBay
cpqDaSparePercentRebuild

cpqDaPhyDrvCntlrIndex
cpqDaPhyDrvIndex
cpqDaPhyDrvModel
cpqDaPhyDrvFWRev
cpqDaPhyDrvBay
cpqDaPhyDrvStatus
cpqDaPhyDrvUsedReallocs
cpqDaPhyDrvRefHours
cpqDaPhyDrvHReads
cpqDaPhyDrvReads
cpqDaPhyDrvHWrites
cpqDaPhyDrvWrites
cpqDaPhyDrvHSeeks
cpqDaPhyDrvSeeks
cpqDaPhyDrvHardReadErrs
cpqDaPhyDrvRecvReadErrs
cpqDaPhyDrvHardWriteErrs
cpqDaPhyDrvRecvWriteErrs
cpqDaPhyDrvHSeekErrs
cpqDaPhyDrvSeekErrs
cpqDaPhyDrvSpinupTime
cpqDaPhyDrvDrqTimeouts
cpqDaPhyDrvOtherTimeouts
cpqDaPhyDrvSpinupRetries
cpqDaPhyDrvBadRecvReads
cpqDaPhyDrvBadRecvWrites
cpqDaPhyDrvFormatErrs
cpqDaPhyDrvPostErrs
cpqDaPhyDrvReallocAborts
cpqDaPhyDrvThreshPassed
cpqDaPhyDrvHasMonInfo
cpqDaPhyDrvCondition
cpqDaPhyDrvHotPlugs
cpqDaPhyDrvMediaErrs
cpqDaPhyDrvHardwareErrs
cpqDaPhyDrvAbortedCmds
cpqDaPhyDrvSpinUpErrs
cpqDaPhyDrvBadTargetErrs
cpqDaPhyDrvSize
cpqDaPhyDrvBusFaults
cpqDaPhyDrvIrqDeglitches
cpqDaPhyDrvHotPlug
cpqDaPhyDrvPlacement
cpqDaPhyDrvBusNumber
cpqDaPhyDrvSerialNum
cpqDaPhyDrvPreFailMonitoring
cpqDaPhyDrvCurrentWidth
cpqDaPhyDrvCurrentSpeed
cpqDaPhyDrvFailureCode
cpqDaPhyDrvBlinkTime
cpqDaPhyDrvErrCntlrIndex
cpqDaPhyDrvErrIDIndex
cpqDaPhyDrvErrIndex
cpqDaPhyDrvErrType
cpqDaPhyDrvScsiOp
cpqDaPhyDrvScsiStatus
cpqDaPhyDrvCamStatus
cpqDaPhyDrvSenseKey
cpqDaPhyDrvQualifier
cpqDaPhyDrvSenseCode
cpqDaPhyDrvBlockValid

cpqDaPhyDrvBlock
cpqDaPhyDrvTime
cpqDaPhyDrvErrDesc
cpqDaPhyDrvThrCntlrIndex
cpqDaPhyDrvThrIndex
cpqDaPhyDrvThrUsedReallocs
cpqDaPhyDrvThrRefHours
cpqDaPhyDrvThrHardReadErrs
cpqDaPhyDrvThrRecvReadErrs
cpqDaPhyDrvThrHardWriteErrs
cpqDaPhyDrvThrRecvWriteErrs
cpqDaPhyDrvThrSeekErrs
cpqDaPhyDrvThrSpinupTime
cpqDaPhyDrvThrDrqTimeouts
cpqDaPhyDrvThrOtherTimeouts
cpqDaPhyDrvThrSpinupRetries
cpqDaPhyDrvThrBadRecvReads
cpqDaPhyDrvThrBadRecvWrites
cpqDaPhyDrvThrFormatErrs
cpqDaPhyDrvThrPostErrs
cpqDaPhyDrvThrNotReadyErrs
cpqDaPhyDrvThrReallocAborts
cpqDaPhyDrvThrHotPlugs
cpqDaPhyDrvThrMediaErrs
cpqDaPhyDrvThrHardwareErrs
cpqDaPhyDrvThrAbortedCmds
cpqDaPhyDrvThrSpinUpErrs
cpqDaPhyDrvThrBadTargetErrs
cpqDaPhyDrvThrViUsedReallocs
cpqDaPhyDrvThrViSpinupTime
cpqDaPhyDrvThrIrqDeglitches

cpqDaCntlrPerfCntlrIndex
cpqDaCntlrPerfInstance
cpqDaCntlrPerfSampleInterval
cpqDaCntlrPerfVersion
cpqDaCntlrPerfCpuPercentBusy
cpqDaCntlrPerfCommandCount
cpqDaCntlrPerfAvgLatency

cpqDaLogDrvPerfCntlrIndex
cpqDaLogDrvPerfIndex
cpqDaLogDrvPerfInstance
cpqDaLogDrvPerfSampleInterval
cpqDaLogDrvPerfAvgQueueDepth
cpqDaLogDrvPerfReads
cpqDaLogDrvPerfWrites
cpqDaLogDrvPerfTotalIO
cpqDaLogDrvPerfCacheHits
cpqDaLogDrvPerfCacheMisses
cpqDaLogDrvPerfReadAheadSectors
cpqDaLogDrvPerfSectorsRead
cpqDaLogDrvPerfSectorsWritten

Traps:

cpqDa3LogDrvStatusChange
cpqDa4SpareStatusChange
cpqDa5AccelStatusChange
cpqDa5AccelBadDataTrap
cpqDa5AccelBatteryFailed

cpqDa5CntlrStatusChange

cpqDa5PhyDrvStatusChange
cpqDa5PhyDrvThreshPassedTrap

cpqStsys Agent

Attributes:

cpqSsMibRevMajor
cpqSsMibRevMinor
cpqSsMibCondition

cpqSsBoxCntlrIndex
cpqSsBoxBusIndex
cpqSsBoxModel
cpqSsBoxFWRev
cpqSsBoxVendor
cpqSsBoxFanStatus
cpqSsBoxCondition
cpqSsBoxTempStatus
cpqSsBoxSidePanelStatus
cpqSsBoxFltTolPwrSupplyStatus
cpqSsBoxBackPlaneVersion
cpqSsBoxTotalBays
cpqSsBoxPlacement
cpqSsBoxDuplexOption
cpqSsBoxBoardRevision
cpqSsBoxSerialNumber

Traps:

cpqSs3FanStatusChange

cpqSs3TempFailed
cpqSs3TempDegraded
cpqSs3TempOK

cpqSs3SidePanelInPlace
cpqSs3SidePanelRemoved
cpqSs4PwrSupplyDegraded

cpqSiFruIndex
cpqSiFruType
cpqSiFruDescr
cpqSiFruVendor
cpqSiFruPartNumber
cpqSiFruFirmwareRevision
cpqSiFruSerialNumber
cpqSiFruSlotNumber
cpqSiFruAssemblyNumber
cpqSiFruChassisNumber
cpqSiFruPositionNumber
cpqSiFruCabinetIDNumber
cpqSiFruSiteLocation

6 Trademarks

Hewlett-Packard and the HP logo are trademarks of Hewlett-Packard Development Company, L.P. in the U.S. and/or other countries.

MultiNet and TCPware are registered trademarks of Process Software.

All other product names mentioned herein may be trademarks of their respective companies.

© Copyright 1997 - 2003 Hewlett-Packard Development Company, L.P.